

GO Pro HD Hero 960 Cheat Sheet		
SHT - Shutter Button	PWR - Power/Mode button	
SEt	SHT enters settings menu. PWR cycles through options	
onF/on0	One Button Mode (automatically record when powered on) On/Off	
F/P/3/PE5	Default Power-up Mode	Video/SinglePhoto/TriplePhoto/TimeLapsePhoto
r1/r2/r3	Video Resolution	16:9SD/16:9HD/4:3HD
Cnt/SPt	Exposure Setting	CenterAverage/SpotMeter
UP/UPd	Image Rotation	RightsideUp/UpsideDown
LFF/LF0	Live Video Feed Enable	VideoOff/VideoOn
oS0/oSF	Onscreen Display for Live Feed	On/Off
P2/P5/P10/P30/P60	Time Lapse Photo every X seconds	2/5/10/30/60 seconds
bL0/bLF	LED Blink	On/Off
bP0/bPF	Beeping Sound	On/Off
nSC/PAL	Video format	NTSC/PAL
LSt	Press SHT to delete last. Once blinking press SHT again to delete, or do nothing to cancel.	
ALL	Press SHT to format card. Once blinking press SHT again to format or do nothing to cancel.	
OFF/60/120/300	Auto Power Off Time	Disable/60/120/300 seconds
dAt	Date/Time. SHT to enter submenu. PWR to change setting, SHT to move to next.	
ESC	SHT to exit settings menu	

GO Pro HD Hero 960 Cheat Sheet		
SHT - Shutter Button	PWR - Power/Mode button	
SEt	SHT enters settings menu. PWR cycles through options	
onF/on0	One Button Mode (automatically record when powered on) On/Off	
F/P/3/PE5	Default Power-up Mode	Video/SinglePhoto/TriplePhoto/TimeLapsePhoto
r1/r2/r3	Video Resolution	16:9SD/16:9HD/4:3HD
Cnt/SPt	Exposure Setting	CenterAverage/SpotMeter
UP/UPd	Image Rotation	RightsideUp/UpsideDown
LFF/LF0	Live Video Feed Enable	VideoOff/VideoOn
oS0/oSF	Onscreen Display for Live Feed	On/Off
P2/P5/P10/P30/P60	Time Lapse Photo every X seconds	2/5/10/30/60 seconds
bL0/bLF	LED Blink	On/Off
bP0/bPF	Beeping Sound	On/Off
nSC/PAL	Video format	NTSC/PAL
LSt	Press SHT to delete last. Once blinking press SHT again to delete, or do nothing to cancel.	
ALL	Press SHT to format card. Once blinking press SHT again to format or do nothing to cancel.	
OFF/60/120/300	Auto Power Off Time	Disable/60/120/300 seconds
dAt	Date/Time. SHT to enter submenu. PWR to change setting, SHT to move to next.	
ESC	SHT to exit settings menu	

GO Pro HD Hero 960 Cheat Sheet		
SHT - Shutter Button	PWR - Power/Mode button	
SEt	SHT enters settings menu. PWR cycles through options	
onF/on0	One Button Mode (automatically record when powered on) On/Off	
F/P/3/PE5	Default Power-up Mode	Video/SinglePhoto/TriplePhoto/TimeLapsePhoto
r1/r2/r3	Video Resolution	16:9SD/16:9HD/4:3HD
Cnt/SPt	Exposure Setting	CenterAverage/SpotMeter
UP/UPd	Image Rotation	RightsideUp/UpsideDown
LFF/LF0	Live Video Feed Enable	VideoOff/VideoOn
oS0/oSF	Onscreen Display for Live Feed	On/Off
P2/P5/P10/P30/P60	Time Lapse Photo every X seconds	2/5/10/30/60 seconds
bL0/bLF	LED Blink	On/Off
bP0/bPF	Beeping Sound	On/Off
nSC/PAL	Video format	NTSC/PAL
LSt	Press SHT to delete last. Once blinking press SHT again to delete, or do nothing to cancel.	
ALL	Press SHT to format card. Once blinking press SHT again to format or do nothing to cancel.	
OFF/60/120/300	Auto Power Off Time	Disable/60/120/300 seconds
dAt	Date/Time. SHT to enter submenu. PWR to change setting, SHT to move to next.	
ESC	SHT to exit settings menu	

GO Pro HD Hero 960 Cheat Sheet		
SHT - Shutter Button	PWR - Power/Mode button	
SEt	SHT enters settings menu. PWR cycles through options	
onF/on0	One Button Mode (automatically record when powered on) On/Off	
F/P/3/PE5	Default Power-up Mode	Video/SinglePhoto/TriplePhoto/TimeLapsePhoto
r1/r2/r3	Video Resolution	16:9SD/16:9HD/4:3HD
Cnt/SPt	Exposure Setting	CenterAverage/SpotMeter
UP/UPd	Image Rotation	RightsideUp/UpsideDown
LFF/LF0	Live Video Feed Enable	VideoOff/VideoOn
oS0/oSF	Onscreen Display for Live Feed	On/Off
P2/P5/P10/P30/P60	Time Lapse Photo every X seconds	2/5/10/30/60 seconds
bL0/bLF	LED Blink	On/Off
bP0/bPF	Beeping Sound	On/Off
nSC/PAL	Video format	NTSC/PAL
LSt	Press SHT to delete last. Once blinking press SHT again to delete, or do nothing to cancel.	
ALL	Press SHT to format card. Once blinking press SHT again to format or do nothing to cancel.	
OFF/60/120/300	Auto Power Off Time	Disable/60/120/300 seconds
dAt	Date/Time. SHT to enter submenu. PWR to change setting, SHT to move to next.	
ESC	SHT to exit settings menu	